

PASSENGER MIRROR IMAGE
No FLAP FOR SIGNALING


3 MURPHY FASTENERS RINGS
IN FLAP

FLAP & GO OUTSIDE
WINDSHIELD STANCHION
CUTOUTS FOR WING NETS

4- LIFT THE DOT
STRAPS TO FASTEN TO
WINDSHIELD STATIONS

NOTE
SCALE IN ERROR
MEASUREMENT CORRECT
TO MUCH SPACE UNDER
DRAWINGS

LOCKED BRASS RING w/ 3/8" hole

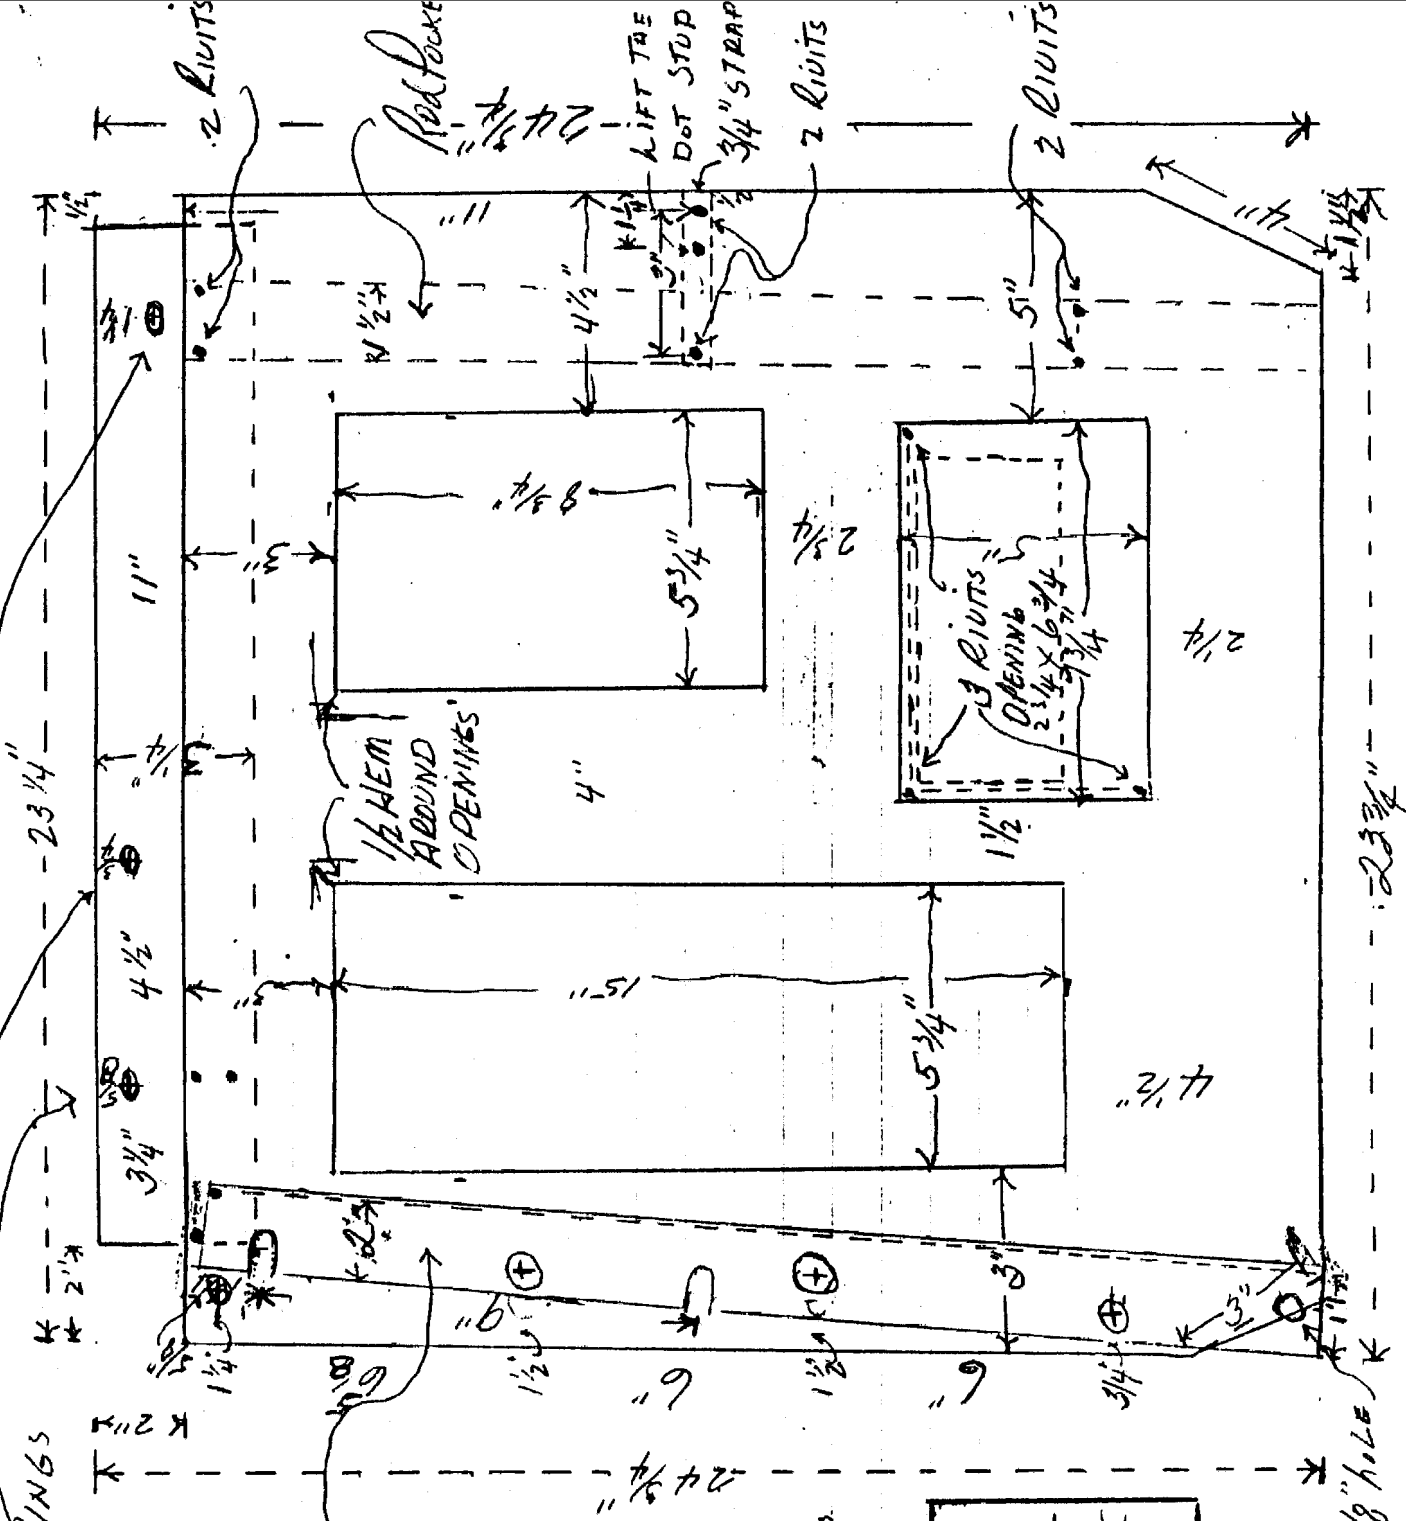

FACE MATERIAL
TURNED UNDER 2 1/2"

METAL LOCK INSIDE
- 2 1/2 LONG 1" TURNED
DOWN

2 1/4" x 2"
KIFT THE DOT FASTENER
CIRCLE

1 1/2" BOUND
HEMED 5 LIT

Divi

7

1 1/2" STREAD

Note

SCALE - IN ERROR
MEASUREMENTS ARE
CORRECT

1 MADE 3" MENSURE
AT BOTTOM SQUARE WITH
FRONT - CHANGED DRAWING