
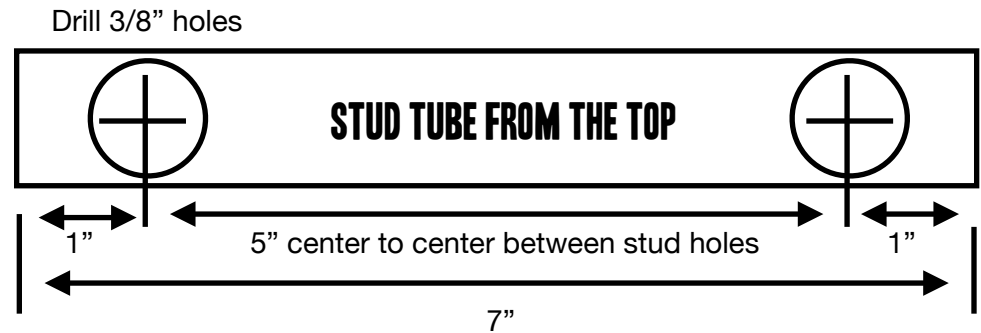


## RUNNING BOARD BRACKET STRAIGHTENING JIG

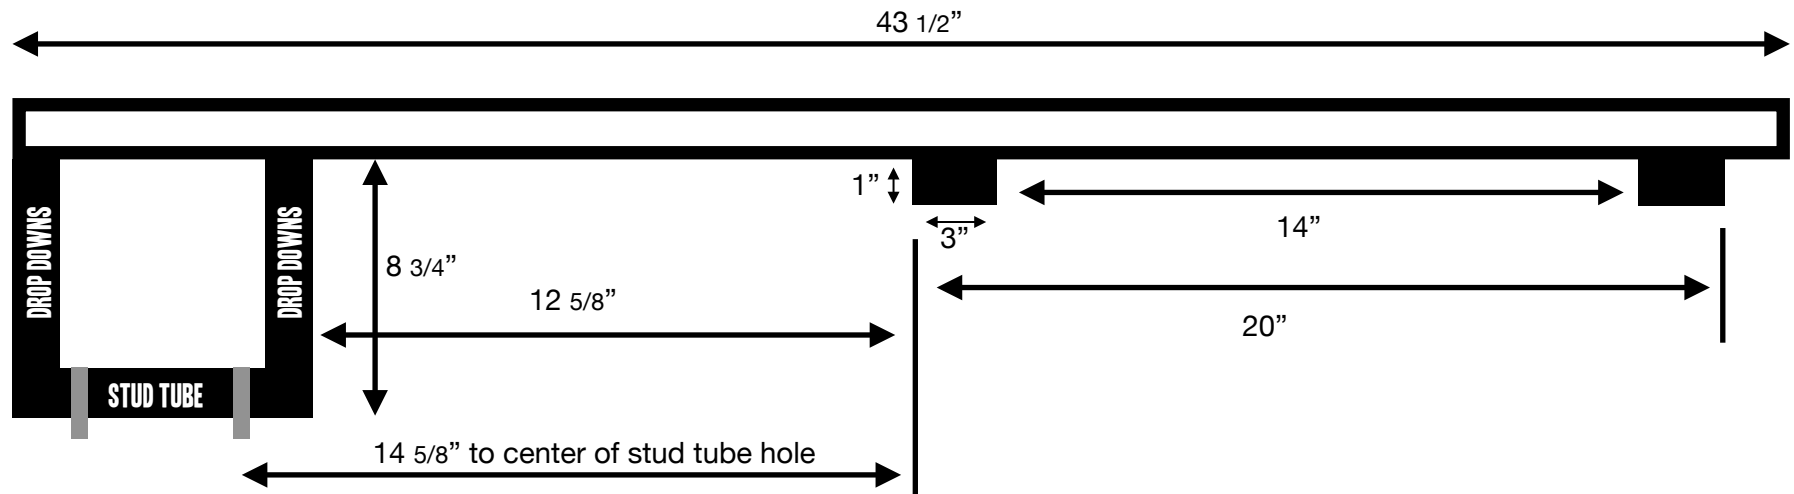

1" Square Tubing

- Drop Downs are 8 3/4" long
- Stud Tube is 7" long

\*\*\*Drill the holes for the Stud Tube first before welding it to the drop down tubes.  
 Drill 3/8 holes at 1" center at each end in stud tube. Studs for stud tube are 3/8 cold rolled round 1 1/2" long. The holes for the stud tubes should be 5" center to center. Taper one end of each stud. The tapered end should come out the bottom. Drive into tube flush and weld flush end to the top.